



SECURICO CCTV

Self-Help Guides

Using Your System With a TV or Monitor

Version 3.1

July 2020

Using Your System With a TV or Monitor

User Manual

COPYRIGHT © 2020 Securico CCTV

ALL RIGHTS RESERVED.

About this Manual

This manual is applicable to Securico CCTV Systems using Hikvision hardware and software.

The manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons.

Please use this user manual under the guidance of professionals.

Trademarks Acknowledgement and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND SECURICO CCTV MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL SECURICO, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF SECURICO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. SECURICO SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, SECURICO WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. SECURICO SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Using Your System With a TV or Monitor

This guide is specifically for Hikvision CCTV systems using the user interface (v4.0) and has a screen directly connected to the recorder box.


All Securico CCTV systems will allow a screen (TV or computer monitor) that uses HDMI or VGA connectors.

Please see v1.1 of this same guide if your CCTV has the earlier style user interface.

Chapter 1. Log-in / Unlock the System


Using a mouse, left-click the **top left circle** of the unlock grid, and while continuing to hold down the left mouse button, move the mouse to draw the unlock pattern as shown in the picture below.


Should you require the system admin password, please see the emails we sent after installation. If you no longer have the email please complete the support form here: securicocctv.co.uk/support

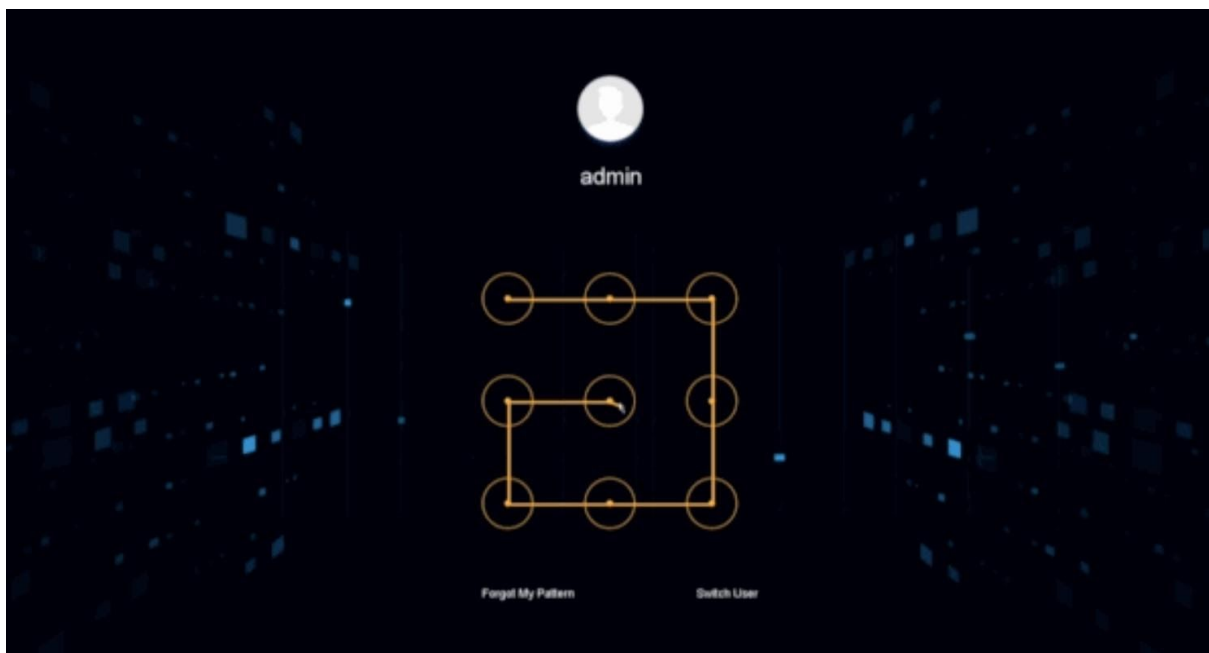

Using Your System With a TV or Monitor

Chapter 2. Playback

1. Right-click the mouse anywhere on-screen and you will be prompted to draw the unlock pattern (as shown in chapter 1 above).
2. If asked to do so, enter your system password.
3. Select **playback** from the top menu (circular play icon: ).
4. Choose the relevant camera(s) by selecting from the menu on the left hand side of the screen.
5. Use the calendar box (bottom-left corner) to locate the month you need. Click < to go back one month or > to go forward one month.
6. Double-click the required date from the calendar box.
7. Click the **play** symbol at the bottom of the screen (circular play icon).
8. You can use the playback controls to reverse play, fast forward or pause.
9. You can also left-click and slide the blue “timeline” bar (bottom of the screen) to skip to the exact time required.

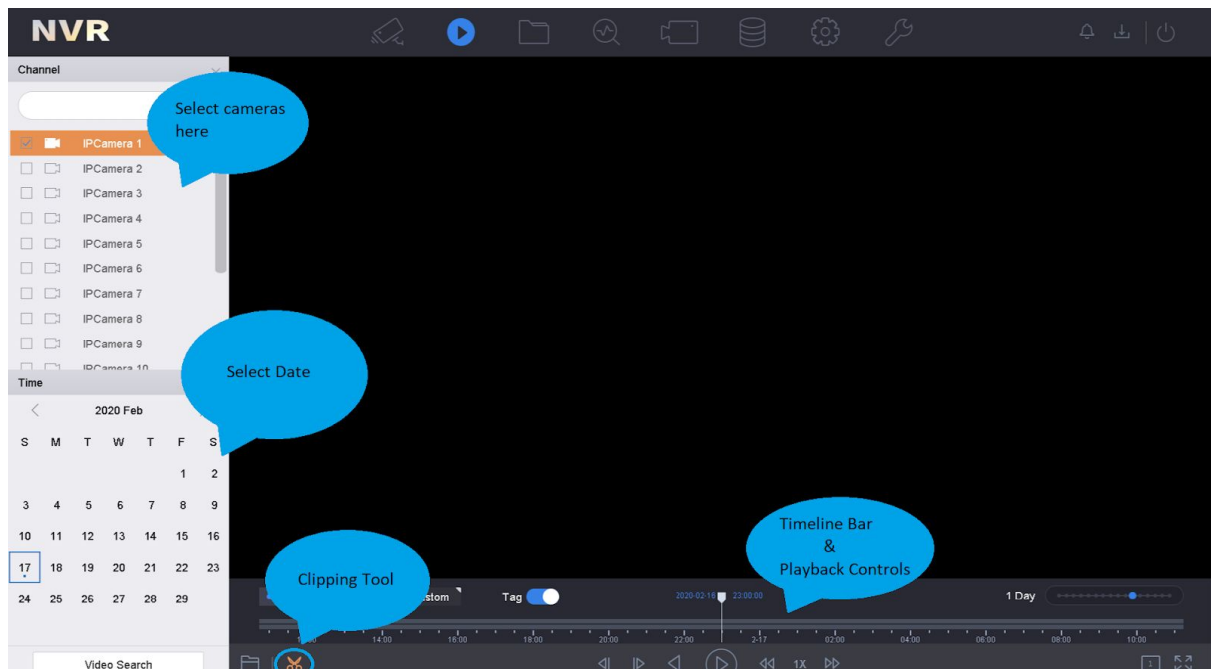

Using Your System With a TV or Monitor

Exporting Footage Continued

7. Insert your USB drive into a USB port on your recorder box (usually there is one USB socket on the front and one on the back).
8. The recorder box will read the USB drive and show the name of the USB drive in the **Device Name** box.
9. If the name does not appear click the refresh icon (circular arrows).
10. Click on your USB device from the box on-screen called **Device Name**.
11. Choose **mp4** as the format you would like to export.
12. Click **OK**.
13. A tick will now appear over the video.
14. Click the **download** button top-right corner of the screen, e.g:



15. Here you will see the progress of the download. Once it has reached 100% the clip will be saved to your USB drive.